


**BIXOLON**

**Bluetooth Connection Manual**  
**LINERLESS PRINTER**

---

**Ver. 1.00**

**SRP-S3000**

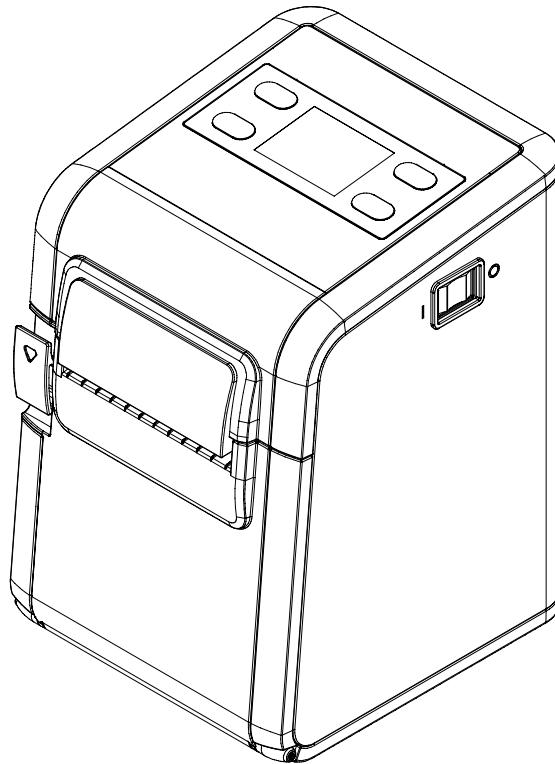

<http://www.bixolon.com>

## **Table of Contents**

<b>1. Manual Information .....</b>	<b>3</b>
<b>2. Precautions.....</b>	<b>3</b>
<b>3. Bluetooth Connection Instructions.....</b>	<b>4</b>
3-1 iOS mode enable .....	4
3-2 Android mode(iOS mode disable).....	6
<b>4. Troubleshooting.....</b>	<b>8</b>

## **1. Manual Information**

This Bluetooth Connection Manual provides information on the connection of Bluetooth-enabled devices with the printer.

We at BIXOLON maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. In following, product specifications and/or user manual content may be changed without prior notice.

## **2. Precautions**

2-1 To connect the printer with another device via Bluetooth, the devices must be within 10m of one another. The connection is broken if the distance between devices exceeds 10m.


2-2 The maximum separating distance may be shortened if transmission obstacles, such as cement walls, are present.

2-3 If a device (such as a microwave oven, wireless LAN, etc.) that uses the same frequency is present, transmission may be interrupted. Separate the printer and Bluetooth-enabled device from such interrupting devices by a distance of at least 5m.


# 3. Bluetooth Connection Instructions

## 3-1 iOS mode enable


1) Select the  icon.

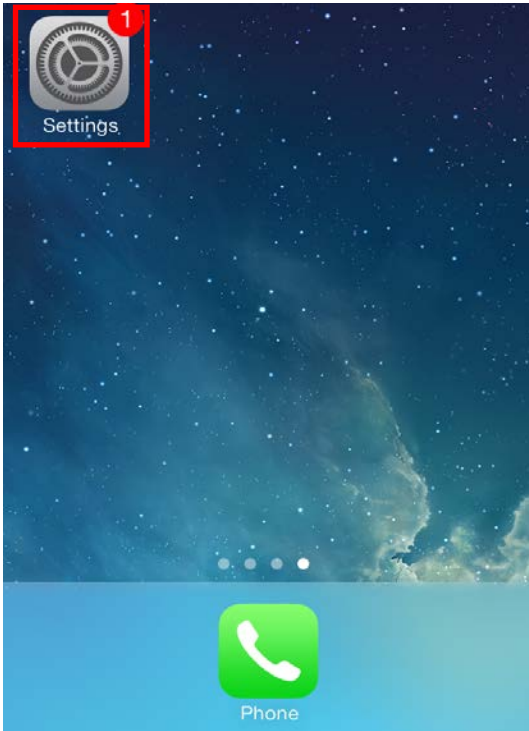


2) Select "Bluetooth".

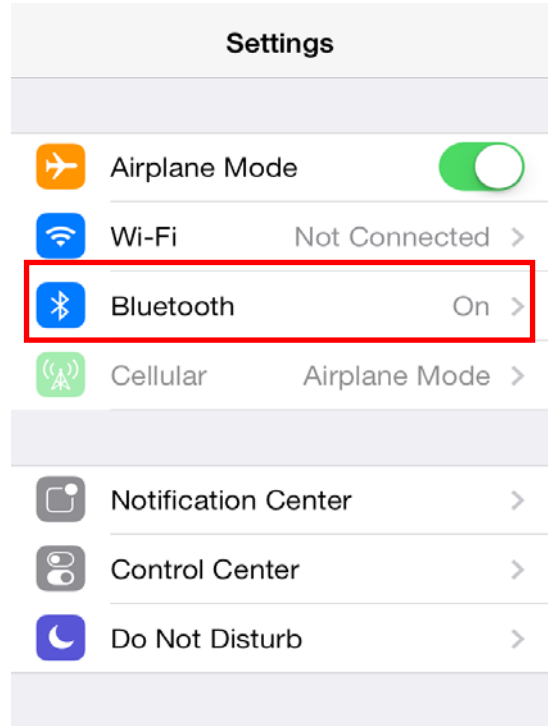

3) Select the printer to connect.

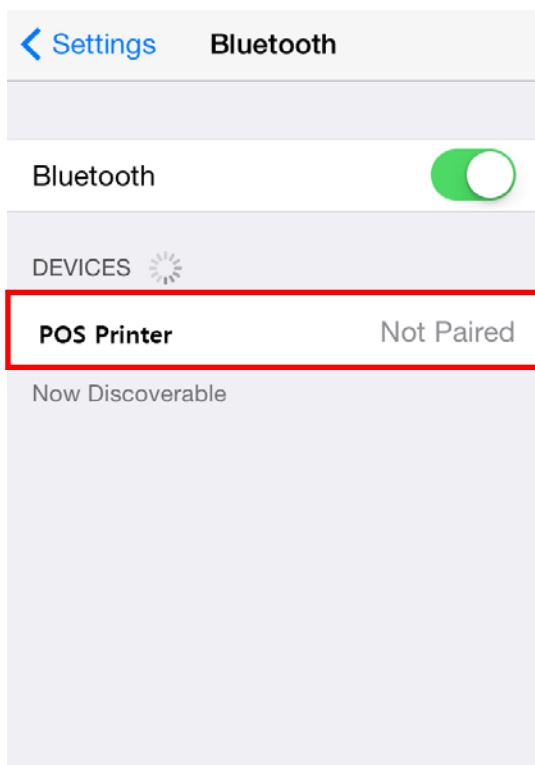


4) When the 6-digit number is displayed as below, press the Pair button.

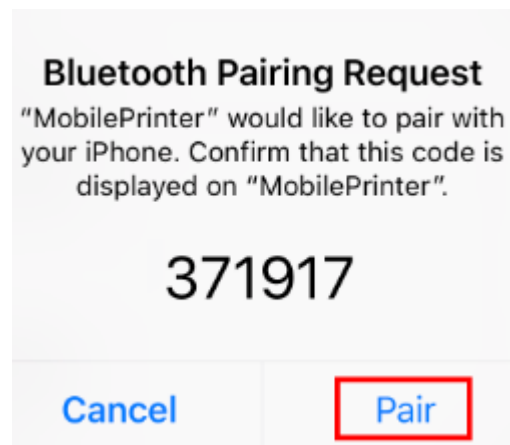


## Bluetooth Connection Manual


5) If the printer LCD displays 6 digits number, press ACCEPT (Power button)

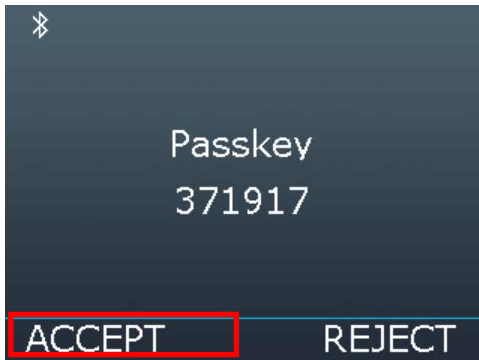


6) If it is displayed as below, enter "PIN" (Default: 0000)

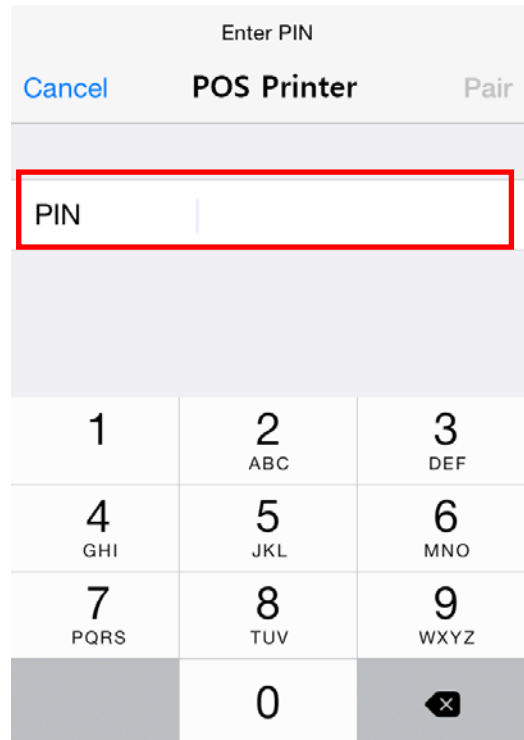

7) Select "Pair"

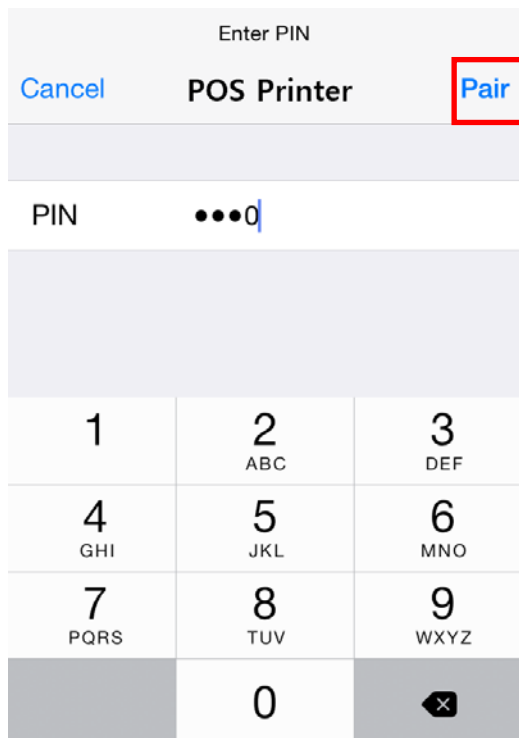


8) Bluetooth communication is available.

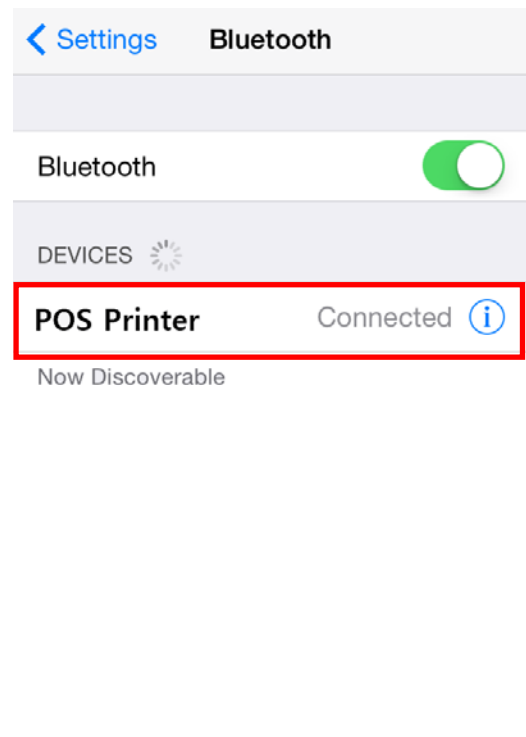


## 3-2 Android mode (iOS mode disable)


1) Select the  icon.

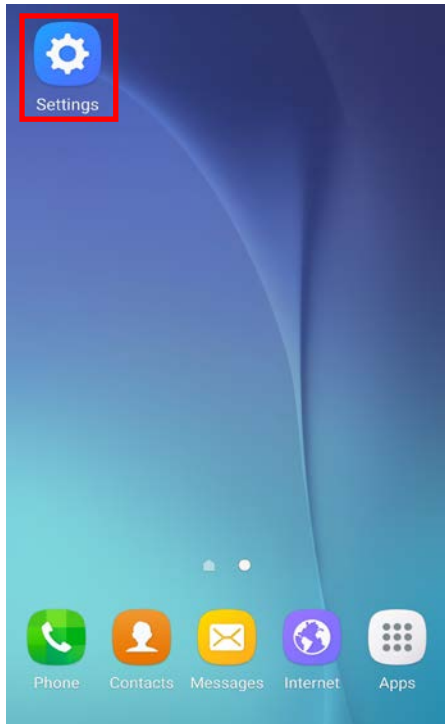


2) Select "Bluetooth".

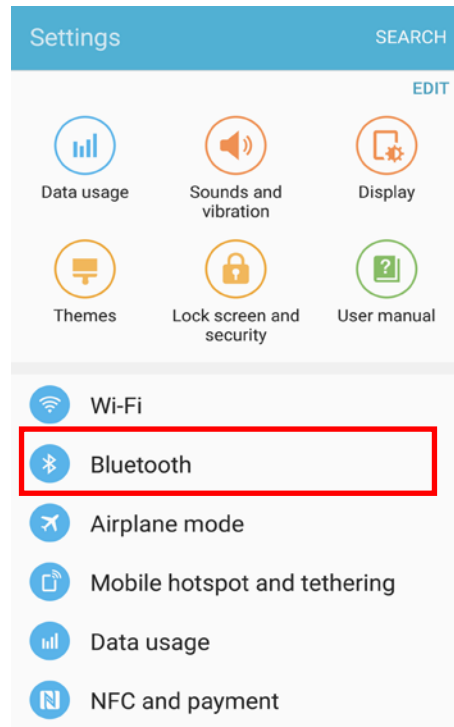

3) Select the printer to connect.

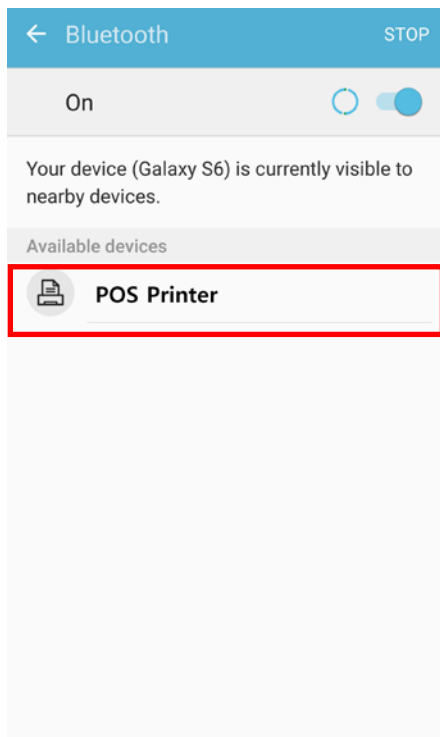


4) When the 6-digit number is displayed as below, press the Pair button.

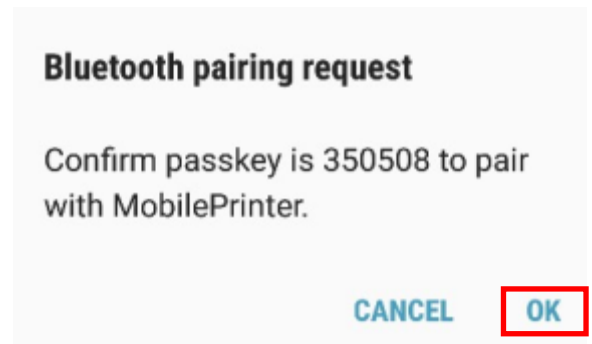


## Bluetooth Connection Manual


5) If the printer LCD displays 6 digits number, press ACCEPT (Power button)

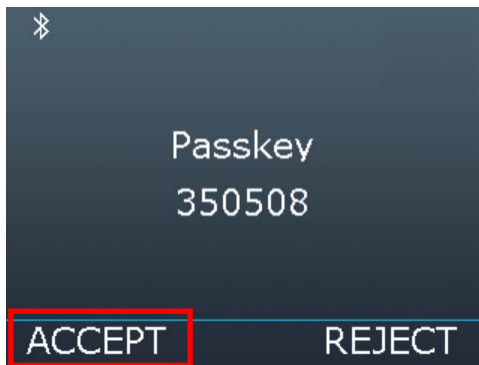


6) If it is displayed as below, enter "PIN" (Default: 0000)

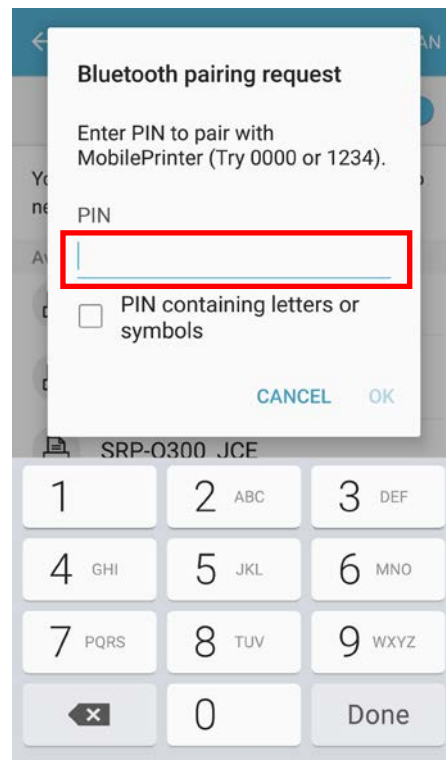

7) Select "OK".

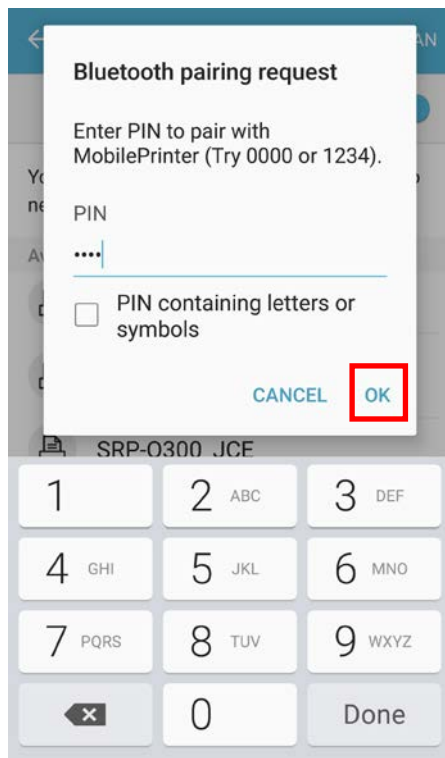

8) Bluetooth communication is available.

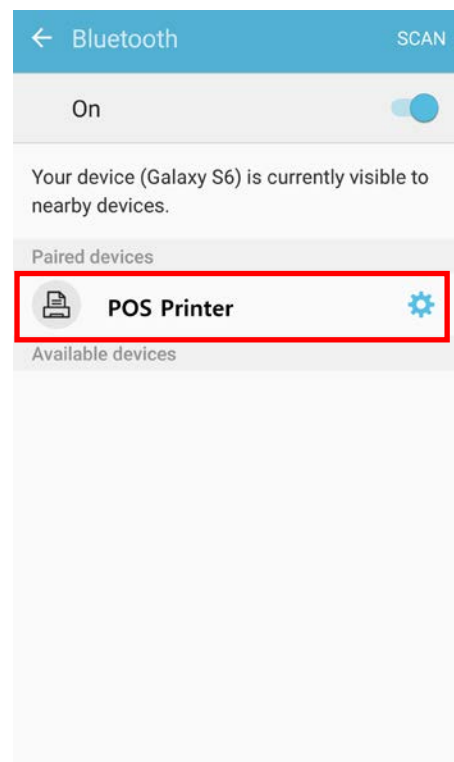

## 4. Troubleshooting

4-1 Please follow the guide below if Bluetooth is not searched on iOS device.

1) Check whether printer is connected to other Bluetooth device.

Printer is not able to be found on your iOS device if it is connected to other bluetooth device. Check the top left icon on the printer's LCD screen



- When the printer does not have a Bluetooth connection with another



device.

- When the printer is connected to another device via Bluetooth

You need to disconnect the connection to other bluetooth device, or turn on the printer.

*\* Printer is automatically connected to last iOS device which was connected.*



### **Copyright**

© BIXOLON Co., Ltd. All rights reserved.

This user manual and all property of the product are protected under copyright law. It is strictly prohibited to copy, store, and transmit the whole or any part of the manual and any property of the product without the prior written approval of BIXOLON Co., Ltd.

The information contained herein is designed only for use with this BIXOLON product. BIXOLON is not responsible for any direct or indirect damages, arising from or related to use of this information.

- The BIXOLON logo is the registered trademark of BIXOLON Co., Ltd.
- All other brand or product names are trademarks of their respective companies or organizations.

BIXOLON Co., Ltd. maintains ongoing efforts to enhance and upgrade the functions and quality of all our products.

In the following, product specifications and/or user manual content may be changed without prior notice.

### **Caution**

Some semiconductor devices are easily damaged by static electricity. You should turn the printer "OFF", before you connect or remove the cables on the rear side, in order to guard the printer against the static electricity. If the printer is damaged by the static electricity, you should turn the printer "OFF".